

DC SD TF Card Adapter Reader User Guide

Tools:

- SD/TF card
- DC card reader
- dreamshell boot disc

Step 1:

First format the SD card to FAT32 format[[fat32 formatting tool](#)].



Step2:

Go to this link to download [Dreamshell file](#)[[www.dc-swat.ru](#)] , Copy the decompressed DS file to the memory card. Then create a Games folder and copy the games in iso format to the file.

名称	修改日期	类型	大小
DS	2020/11/17 16:55	文件夹	
Games	2020/11/17 16:43	文件夹	

名称	修改日期	类型	大小
DS_CORE.BIN	2016/2/2 23:40	BIN 文件	1,583 KB
update	2016/2/2 23:41	文件夹	
modules	2016/2/2 23:41	文件夹	
lua	2016/2/2 23:41	文件夹	
gui	2016/2/2 23:41	文件夹	
fonts	2016/2/2 23:41	文件夹	
firmware	2016/2/2 23:41	文件夹	
doc	2016/2/2 23:41	文件夹	
cmds	2016/2/3 17:11	文件夹	
apps	2016/2/2 23:41	文件夹	

名称	修改日期	类型	大小
S1HB.iso	2018/4/24 11:18	光盘映像文件	579,238 KB
S1HC.iso	2018/4/24 11:23	光盘映像文件	672,224 KB
snes4all.iso	2019/1/5 10:21	光盘映像文件	27,552 KB
SONICWI2.iso	2019/1/7 13:29	光盘映像文件	18,144 KB
SONICWI3.iso	2019/1/11 18:04	光盘映像文件	23,296 KB


Step3:

Put the CD into the host, and insert the adapter into the interface of the host.



Step4:

Power on the host and enter the dreamshell system.

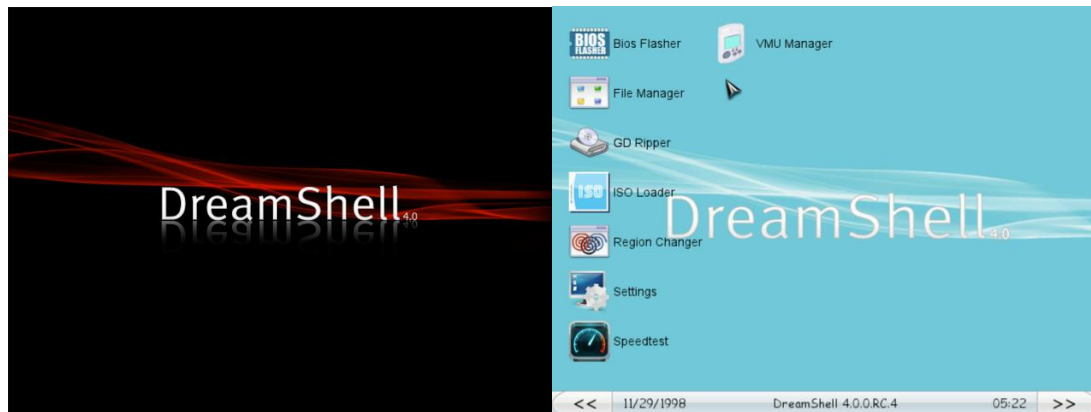

Step5:

Click the [ISOloader] software, start to load the SD Games file, then select the game and click the A button to run.

